

# DIAMOND PADS

## MARBLELUX

To easily restore the floors with maximum efficiency on epossidica, pvc e vinile



Scopri di più



# MARBLELUX

## IMPREGNATED AND ECO-FRIENDLY PAD

Special diamond PAD with an innovative formula studied for **restoring floors and micropolishing marble, granite, terrazzo and natural stones floors with autoscubbers and water only.**

The **flexible and resistant support** allows MARBLELUX to **quickly grind and polish** leaving a smooth finish.

With MARBLELUX it is possible to choose between 4 **different finishes: glossy, semi-glossy, satin or matte.**

**Compatible** with all the professional AUTOSCRUBBERS and available in different diameters.


## ADVANTAGES COMPARED TO TRADITIONAL PADS

- ✓ Thanks to its special formula studied in our laboratories, MARBLELUX pads are suitable for **restoring** marble, granite, natural stones and gres porcelain tile;
- ✓ **Easy to use and ECO-FRIENDLY.** Mirror polishing and high brightness without the use of chemicals and waxes;
- ✓ MARBLELUX, used with a **little amount of water**, easily removes scratches, stains and "orange peel" effect on marble, terrazzo and natural stones. This is possible using an AUTOSCRUBBER (we suggest the GIULY line man down or NIKY man on board). Ideal also for small matte restoring in bathrooms, on benches with **manual grinder HANDY MACHINE or ORBITOP**;
- ✓ It can be used **with water**;
- ✓ Innovative design, high flexibility
- ✓ MARBLELUX is the line of diamond pads with the **highest thickness** on the market, this guarantees a **better performance** than traditional discs
- ✓ **Economic** compared to mechanical polishing using diamond and resin tools
- ✓ Ideal for **ordinary maintenance** of flooring with amazing results
- ✓ Available in **different grits** (from largest to finest): X, 0000, 000, 00, 0, 1, 2, 3, 4, 5, 6.
- ✓ Available in **different sizes**: 100, 125, 140, 150, 200, 240, 270, 330, 430, 500, 530, 685[mm].

## AVAILABLE DIAMETERS CHART

ARTICLE	DIAMETER [mm]	AVAILABLE GRITS
MARBLELUX 27" - Ø685mm	685	Grits for diamond pads (X-6)
MARBLELUX 20" - Ø508mm	500	Grits for diamond pads (X-6)
MARBLELUX 17" - Ø430mm	430	Grits for diamond pads (X-6)
MARBLELUX 16" - Ø400mm	400	Grits for diamond pads (X-6)
MARBLELUX 13" - Ø330mm	330	Grits for diamond pads (X-6)
MARBLELUX 11" - Ø280mm	280	Grits for diamond pads (X-6)
MARBLELUX 10,5" - Ø265mm	265	Grits for diamond pads (X-6)
MARBLELUX 9,5" - Ø240mm	240	Grits for diamond pads (X-6)
MARBLELUX 8" - Ø200mm	200	Grits for diamond pads (X-6)
MARBLELUX 6" - Ø150mm	150	Grits for diamond pads (X-6)
MARBLELUX 5,5" - Ø140mm	140	Grits for diamond pads (X-6)
MARBLELUX 5" - Ø125mm	125	Grits for diamond pads (X-6)
MARBLELUX 4" - Ø100mm	100	Grits for diamond pads (X-6)

\*other diameters available upon request

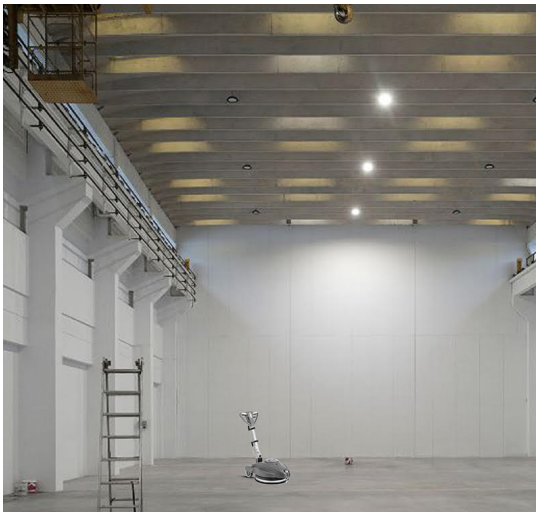

## AVAILABLE GRITS CHART


CODE	GRIT	USAGE
X	Grit 15	Very aggressive grit ideal for deep scratches removal
0000	Grit 30	Very aggressive grit ideal for deep scratches removal
000	Grit 60	Step after grit 0000
00	Grit 120	Step after grit 000
0	Grit 220	Recommended for superficial marks. At the end of the application the hardner <b>HARDYCEM LITHIUM</b> can be used.
1	Grit 400	Step after grit 0 to remove the excess of the hardner leaving a matte finish.
2	Grit 800	Step after grit 1 to achieve a satin finish.
3	Grit 1500	Step after grit 2 to achieve a semi-glossy finish.
4	Grit 3000	Step after grit 3 to achieve a glossy finish.
5	Grit 5000	Step after grit 4 to achieve maximum mechanical brilliance.
6	Grit 10000	Step after grit 5 to achieve a finish similar to the chemical crystallization



## FINISHES ACHIEVED AFTER GRINDING WITH MARBLELUX

*To achieve the desired effect (glossy, semi-glossy, satin or matte), carefully choose the step to begin with (step X, 0000, 000, 00, 0, 1, 2, 3, 4, 5, 6) for removing scratches.*

*Once the grinding process is completed, polish with POWDY-SHINE STRONG and then wash the surface with a WHITE PAD and PROOFY SOAP EXTRA.*

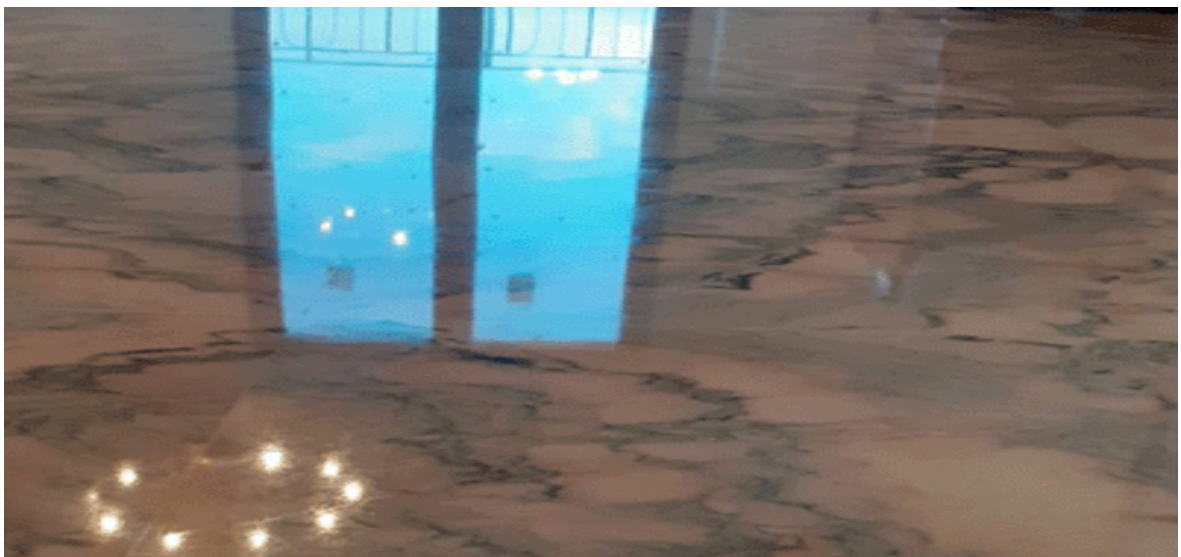

## FINISHES ACHIEVED AFTER GRINDING WITH MARBLELUX







Scopri di più



Website



Via Teramo, 11, 65024  
T. +39 085 8562076 / +39 085 8121061  
Manoppello Scalo (PE) Italy  
email: [info@lmamachine.com](mailto:info@lmamachine.com) - [www.lmamachine.com](http://www.lmamachine.com)

